WASHING MACHINE

INSTRUCTION BOOK

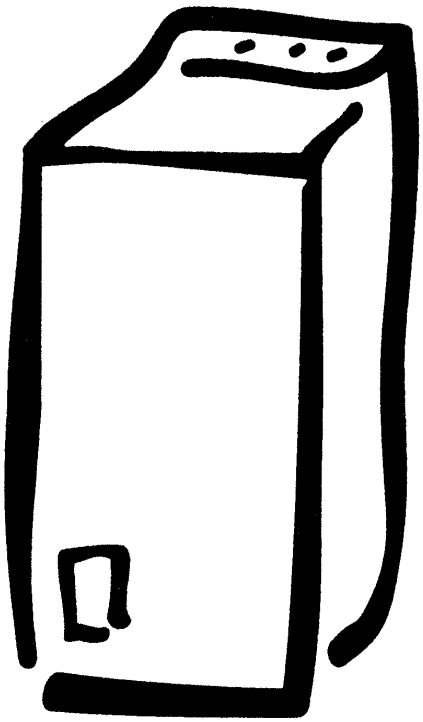

EWT 1342

146 8300 00 - 04/05

GB

Downloaded From WashingMachine-Manual.com Manuals

CONTENTS

FOR THE USER 3

Warnings 3
- Usage 3
- Precautions against frost 3
- Scrapping 3
- Protection of the environment 3

Washing machine description 4
- The control panel 4
- The display 4

Configuration of your appliance 5
- Language 5
- Clock 5
- Permanent extra rinse 5
- Brightness 5
- Contrast 6
- Audible signal volume 6

How to do a wash ? 7
- Loading the washing 7
- Proportioning of detergents 7
- Select the desired programme 7
- Select the temperature 7
- Select the spinning speed, the rinse hold or Silence cycle options 7
- Select the desired options 8
- How to change a programme during its cycle ? 9
- Cancelling a programme 9
- How to open the lid during a washing cycle ? 9
- End of programme 9
- Memories 9

Programs table 10

Washing guide 11
- Sorting and preparing your washing 11
- Washing load depending on the nature of the material 11
- Detergents and additives 11
- International symbols for care of textiles 12

Care and cleaning 13
- Descaling the washing machine 13
- The surface 13
- The detergents dispenser 13
- The drain filter 13

Operating problems 14

Guarantee 15

After sales service 15

FOR THE INSTALLER 16

Warnings 16

Technical characteristics 16

Installation 17
- Unpacking 17
- Position 17
- Moving your washing machine 17
- Leveling 17
- Water inlet 17
- Drain 18
- Electrical connection 18

Downloaded From WashingMachine-Manual.com Manuals

A. FOR THE USER

1. WARNINGS

Keep this user's manual with your washing machine. If you sell your washing machine or give it away, make sure that it is accompanied by its user's manual. The new user can then be informed of how the washing machine operates and read relevant warnings.

These warnings have been written for your safety and for the safety of others. Please read these comments carefully before installing and using your washing machine. Thank you for your attention.

1.1. Usage

- When you receive your washing machine, unpack it or have it unpacked immediately. Check its general appearance. Make any reserves in writing on the delivery form and keep a copy.
- Your washing machine was designed for use by adults. Make sure that children do not touch it or use it as a toy.
- Do not modify or attempt to modify the characteristics of this washing machine. This could be dangerous for you.
- Your washing machine is intended for normal domestic use. Do not use it for commercial or industrial purposes or for any purpose other than that for which it was designed : to wash, to rinse and to spin.
- Unplug the power suplly plug and close the water supply tap every time after using your washing machine.
- Only wash articles that can resist machine washing. Refer to the instructions on the label for each article.
- Do not wash underwear with bones, or any material without hems, or torn materials in your washing machine.
- Remember to remove all coins, safety pins, boraches, screws, etc., before each wash. They can cause serious damage if they are left in your washing.
- Do not put articles in your washing machine if you have used a solvent, alcohol, trichloroethylene, etc., to remove stains from them. If you must use these stain removers, wait until the product has evaporated before putting the articles in the drum.
- Collect all small articles such as socks, belts, etc., in a small cloth bag or pillow case.
- Use the quantity of detergent indicated in the «proportioning of detergents» section.
- Always unplug the washing machine before cleaning it and doing any maintenance.

1.2. Precautions against frost

If your washing machine is exposed to temperatures below 0°C, take the following precautions :

- Close the tap and disconnect the water supply pipe.
- Put the end of this pipe and the drain pipe into a bowl on the floor.
- Select the «Drain» programme and make sure it works until it is complete.
- Switch the washing machine off by putting the program selector to the «Off»* position or pressing on the «On/Off»* key.
- Unplug the washing machine.
- Screw in the water inlet pipe and install the drain pipe.

Water that remained in the pipes will then be evacuated, thus preventing the formation of frost or ice that can damage your washing machine.
The next time you want to use your washing machine, make sure that it is installed in a room in which the temperature is above 0°C.

1.3. Scrapping

All materials marked with the symbol can be recycled. Put them in a waste tip (ask for information from your municipal offices) so that they can be recovered and recycled. When you take your washing machine to the tip, make sure that everything that could be dangerous is out of service ; cut the power supply cable flush with the surface of your washing machine.

The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

1.4. Protection of the environment

We recommend that the following instructions should be followed to achieve savings in water and energy and therefore to contribute to protection of the environment:

- If possible, use the washing machine at full capacity rather than with partial loads (however, do not overload the drum).
- Only use the Prewash or Soak function for very dirty washing.
- Use a detergent dose adapted to the water hardness (see «proportioning of detergents» section) and to the amount of washing and how dirty it is.

*depending on model

Downloaded From WashingMachine-Manual.com Manuals

2. WASHING MACHINE DESCRIPTION

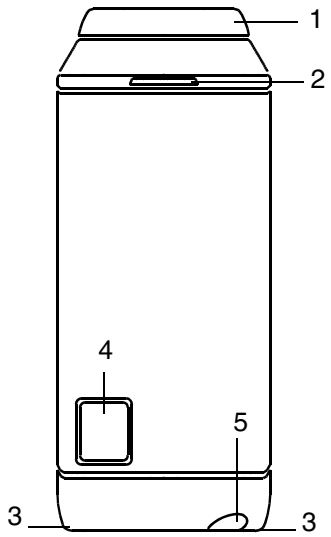

1 - Control panel
2 - Lid opening handle
3 - Leveling screws
4 - Filter door
5 - Lever for moving the washing machine

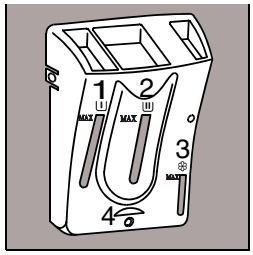

The detergent dispenser
1 - prewash
2 - wash
3 - softener
(do not exceed the MAX mark)
4 - softener overflow (if overfilled).

2.1. The control panel

1 - Program selector and «Stop» position
2 - Display
3 - Pushbuttons and their functions
4 - «Sart/Pause» pushbutton

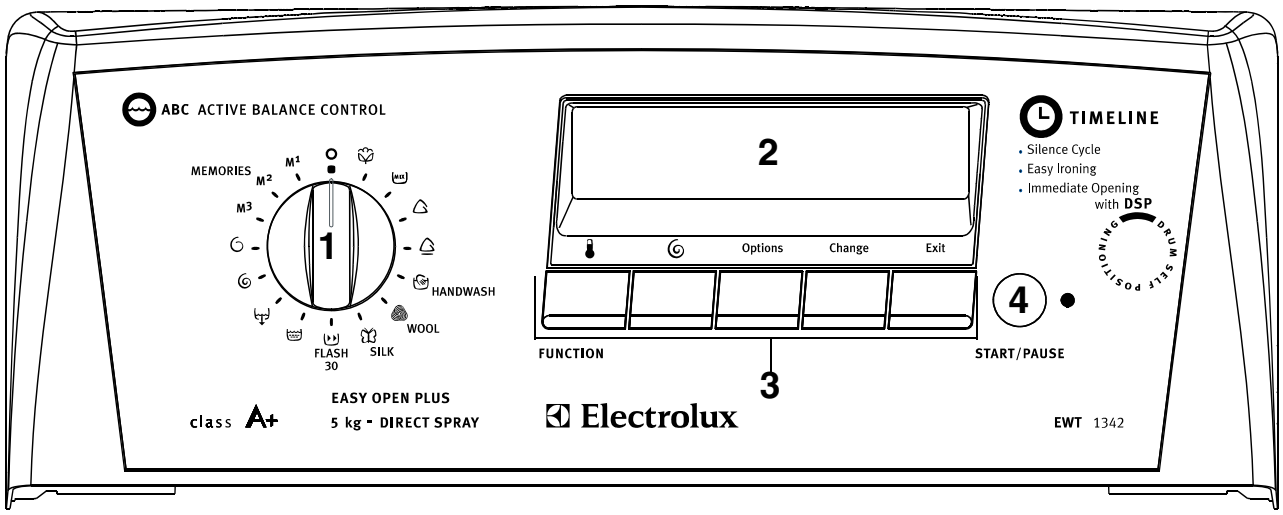

2.2. The display

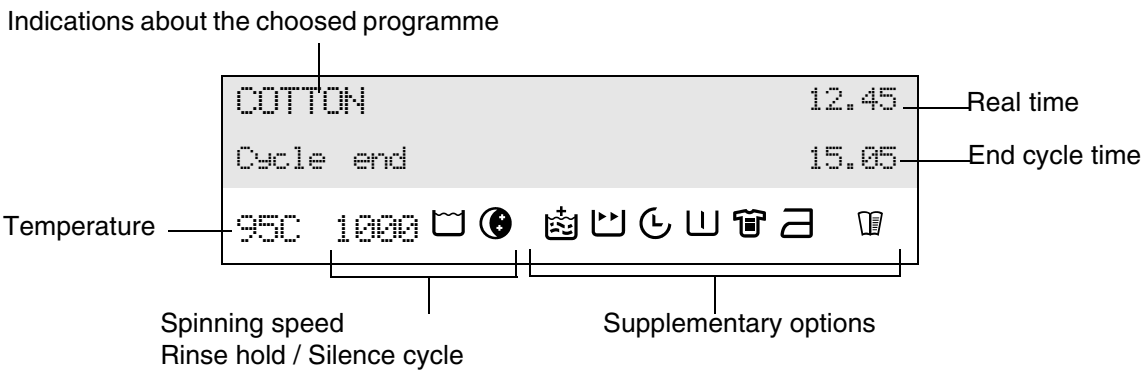

Downloaded From WashingMachine-Manual.com Manuals

3. CONFIGURATION OF YOUR APPLIANCE

When your appliance is connected to the electrical network, turn the programme selector on the Cotton position. You can then configurate your washing machine according the following parameters :

3.1. Language

When you switch on your washing machine for the first time (programme selector on the cotton programme), the language that will appear in the display window will be English.
Note: If you want to change this language, please follow the following instructions :

- Press the "Spin " and "Options" buttons simultaneously for at least 2 seconds,
- Press the "Change" button to select the required language,
- Press the "Exit" button to confirm your choice.

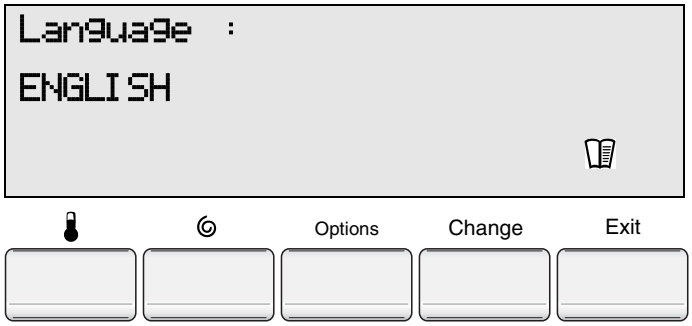

3.2. Clock

Setting the time is important because the end of cycle time display depends on it. To set the time :

- Press the "Options" button until the "Setup" option appears,
- Press the "Change" button once to go into the "Setup" option,
- Press the "Options" button to select the "Clock" menu,
- The time changes in minute stages just by pressing the "Change" button. The time changes in 10 minute stages by holding the "Change" button down.
- Press the "Exit" button to confirm your choice. Then press it once more to go back to the programme selection.

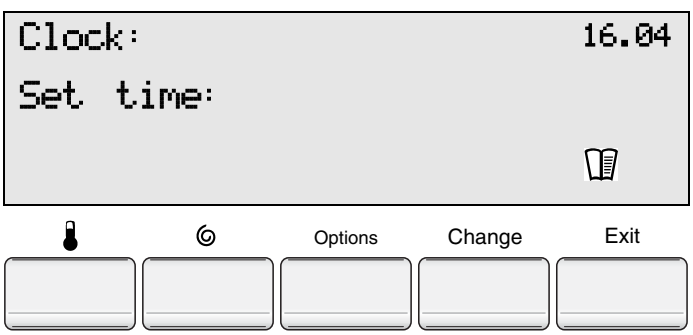

3.3. Permanent extra rinse

Your washing machine is economical with water. But in some cases, depending on the hardness of the water or if you have sensitive skin, it may be useful to rinse with more water.

- Press the "Options" button until the "Setup" option appears,
- Press the "Change" button once to go into the "Setup" option,
- Press the "Options" button to select the "Rinse +" menu,
- Press the "Change" button to select the Rinse + option or not (YES / NO in the display window),
- Press the "Exit" button to confirm your choice. Then press it once more to go back to the programme selection

When "Rinse +" mode is selected two additional rinses take place in the Cotton programmes and one extra rinse for the Synthetics and Delicates programmes. In addition, the symbol will appear in the options line in the display window.

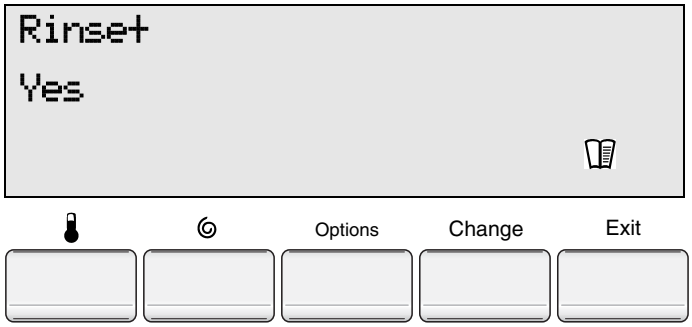

3.4. Brightness

To set the brightness of the display window:

- Press the "Options" button until the "Setup" option appears.
- Press the "Change" button once to go into the "Setup" option.,
- Press the "Options" button to select the "Brightness" menu,
- Press the "Change" button to set the required brightness level,
- Press the "Exit" button to confirm your choice. Then press it once more to go back to the programme selection.

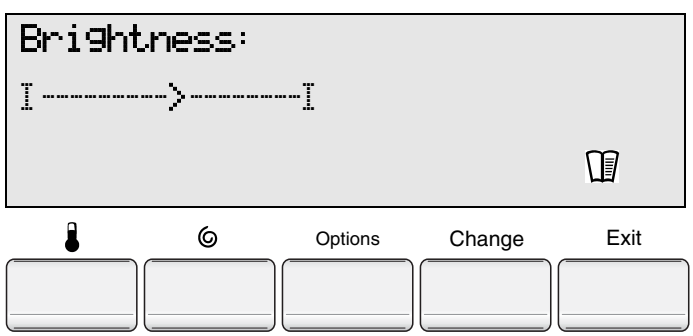

Downloaded From WashingMachine-Manual.com Manuals

3.5. Contrast

To set the contrast of the display window :

- Press the "Options" button until the "Setup" option appears,
- Press the "Change" button once to go into the "Setup" option,
- Press the "Options" button to select the "Contrast" menu,
- Press the "Change" button to set the required contrast level,
- Press the "Exit" button to confirm your choice. Then press it once more to go back to the programme selection.

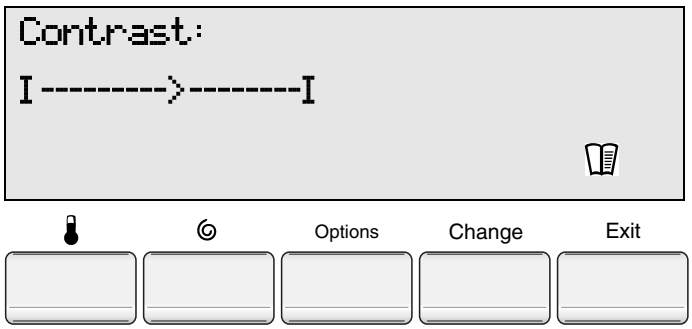

3.6. Audible signal volume

To set the audible signal volume:

- Press the "Options" button until the "Setup" option appears,
- Press the "Change" button once to go into the "Setup" option,
- Press the "Options" button to select the "Sound" menu,
- Press the "Change" button to set the required sound level : normal, low, no sound,
- Press the "Exit" button to confirm your choice. Then press it once more to go back to the programme selection.

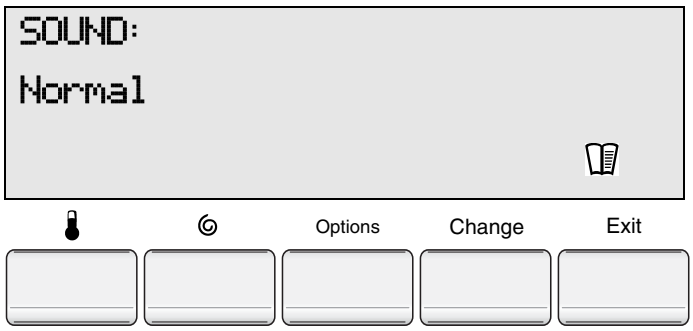

Downloaded From WashingMachine-Manual.com Manuals

4. HOW TO DO A WASH?

Before the first wash in your washing machine, we recommend that you should do a preliminary wash at 90°C with detergent but without any washing to clean the tub.

4.1. Loading the washing

- Lift the machine cover.
- Open the drum by pressing on the locking button A; the two flaps automatically separate.
- Insert the washing, close the drum and the cover of your washing machine.

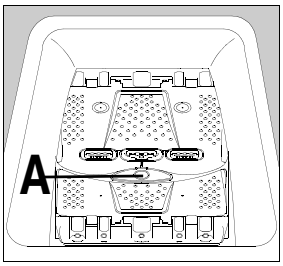

Warning : before you close the cover of your washing machine, make sure that the drum door is properly closed:
• the two flaps latched together,
• the locking button A extended.

4.2. Proportioning of detergents

Your washing machine was designed to reduce water and detergent consumption, therefore reduce the doses recommended by detergent manufacturers.
Pour the powder detergent dose into the wash compartment and into the prewash compartment if you chose the «prewash» option. Pour the softener into the compartment and Javel water into the compartment if you wish. If you are using a different type of detergent, refer to the «detergents and additives» section in the washing guide.

4.3. Select the desired programme

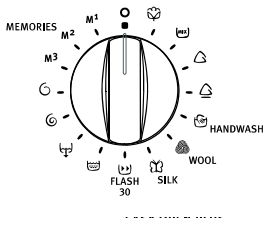

Turn the programme selector to choose the desired programme. The appropriate message will appear in the display window. The display window will show the time the selected programme cycle will finish, with the calculation based on the maximum load for each type of material. The Start/ Pause button light will start to flash. If you have a small load to wash, at the start of the cycle the display window will still show the end of the cycle as if it were a maximum load. The duration display will be gradually adjusted while the cycle is running through.

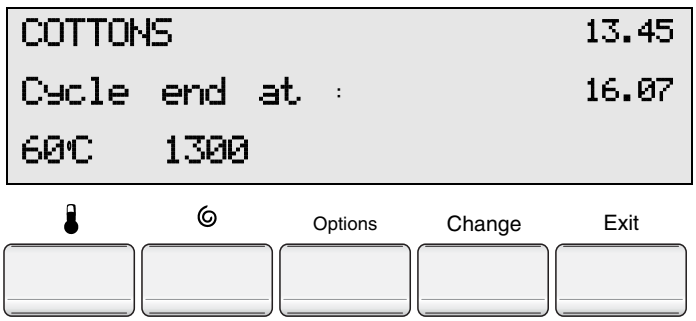

4.4. Select the temperature

Keep pressing the "Temperature" button to increase or reduce the temperature if you want your washing washed at a different temperature from the one selected by the washing machine. Some programmes do not allow you to change the temperature (the "selection error" message will appear in the display window).
The maximum temperature available message will appear on the second line of the display window (instead of "cycle end at"). The temperature selected will appear in the corner of the 3rd line of the display window.

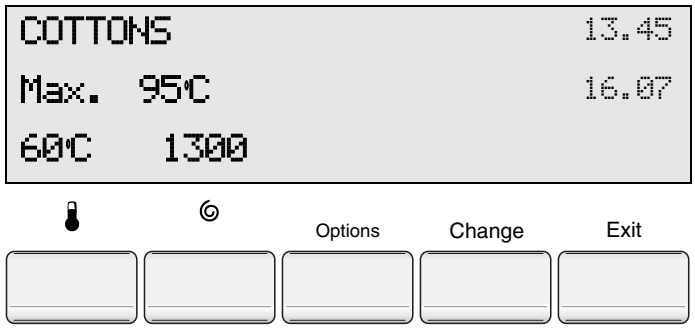

4.5. Select the spinning speed, the rinse hold or Silence cycle options

Press the button "Spinning " to change the spin speed if you want your washing to be spun at a different speed from the one selected by the washing machine.
By pressing the spin speed button you can also choose the "0" no spin option, Rinse hold option and Silence cycle option .

- The "0" no spin option : stops all spin phases and increases the number of rinses for the Cottons and Synthetics programmes.
- Rinse hold option : the washing machine will not empty the last rinse water and so the washing will not crease.
- Silence cycle option : the washing machine will not empty the last rinse water and so the washing will not crease. As all the spin phases will be cut out the washing cycle will be less noisy and can be selected at night. Rinses on the Cotton and Synthetics programmes will use more water.

The relevant message will appear on the second line of the display window. The spin speed selected will be indicated on the 3rd line above the "Spin " button.

After a rinse hold or Night silence cycle you can choose one of the following programmes:

- DRAIN : To drain the water, select the drain programme using the programme selector then press the Start/Pause button.
- SPIN : to spin the washing choose the spin or the delicate spin programmes with the programmes selector : select the spinning speed using the «spin » button and then press the START/PAUSE button.

Downloaded From WashingMachine-Manual.com Manuals

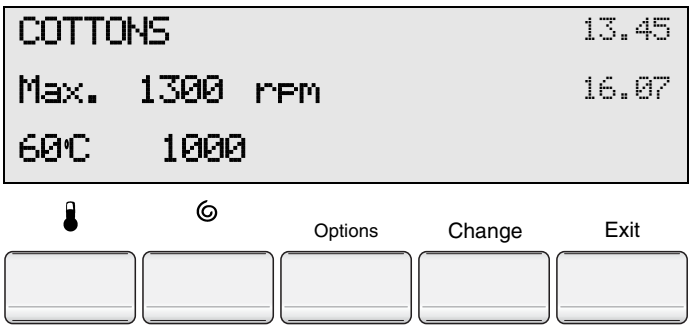

4.6. Select the desired options

Depending on the programme selected only certain options are available and visible during the selection period. In addition not all options are compatible with each other. The incompatible options symbols will disappear from the display window.

The "**Options**" button allows you to move from one option symbol to another, the "**Change**" button allows you to select or change the status of the various symbols and the "**Exit**" button allows you to return to the previous selection.
The various functions must be selected after choosing the desired programme and before pressing the Start/Pause button.
When you press the "Options" button all the symbols for options compatible with the selected programme will appear in the display window.
The first option will begin to flash. Its name and status will appear in the display window. If you want to change the option status press the "Change" button. A line will appear below the option symbols indicating that the option has been selected. To select other options press the "Options" button again and proceed as before.
When you have finished selecting options, press the "Exit" button and the selected symbols will remain in the display window.
Note : to change options already selected, repeat the above procedure.
Important : When selecting options, if you press the "Temperature", "Spin" or "Start/Pause" buttons, these functions will be carried out.

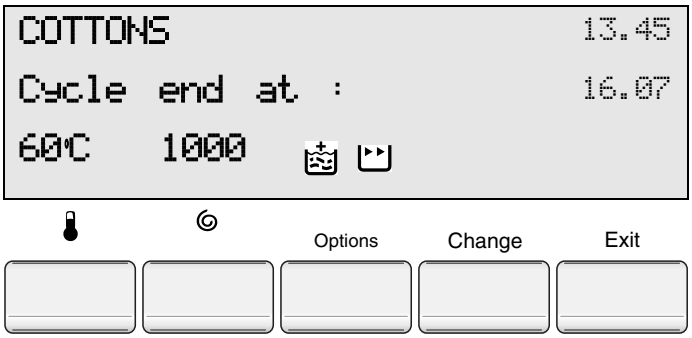

4.6.1. Occasional rinse+ option

This option can be selected for all programmes except Wool, Hand wash and the short programme. The washing machine will add two rinses for Cotton programmes and just one for Synthetics, Delicates and Silk programmes.
This option is recommended for sensitive skins and in regions where the water is very soft.
You can select this option for all programmes permanently (see paragraph 3.3) or just for one particular programme.

4.6.2. Short / extra short option

This option can be used for slightly soiled Cotton fabrics, Synthetics or Delicates to obtain good washing results in a very short time. The washing time will be reduced depending on the type of washing and the temperature selected. Two options can be selected: the "Short" or the "Extra short" option; these will be shown in the display window.

4.6.3. Delay start option

With this option you can postpone the start of a washing programme by 30, 60, 90 minutes, two - 20 hours. The time you have selected is shown in the display window.
You must select this option after selecting the programme and before pressing the Start/Pause button. You can change or cancel the delayed start option at any time before pressing the Start/Pause button. If you have already pressed the Start/Pause button and you wish to change or cancel the delayed start, proceed as follows :

- Set the washing machine to Pause by pressing the Start/Pause button
- Deselect the Delayed Start option by changing the status,
- Press the Start/ Pause button to start the programme.

Important ! The lid will be locked during the delayed start period. If you need to open it you must first of all set the washing machine to Pause by pressing the Start/Pause button. After closing the lid again, press the Start/Pause button. The deferred start cannot be selected with the Spin and Drain programmes.

4.6.4. Pre-wash option

Select this option if you want your washing to be prewashed before the main wash (can't be used with Wool, Hand wash, Silk and Flash 30 programmes).
Pre-washing ends with a short spin for Cotton and Synthetics programmes whereas the water is only drained in Delicates programmes.

4.6.5. Intensive option

For very dirty washing. This option can only be selected for Cotton and Synthetics programmes. The washing time will be increased depending on the temperature of the cycle and the type of fabric.

4.6.6. Easy iron option

When choosing this option the washing is washed and spun gently to avoid any creasing. Because of this ironing is easier. This option can be used for Cotton and Synthetic fabrics. In addition the washing machine will carry out additional rinses for Cotton and Synthetics programmes.
If this option is used with Cotton programmes, the spin speed will be automatically reduced to 1000 rpm.

4.6.7. Economy option

This option can be selected only for synthetics lightly or normally soiled with a temperature of 40°C or higher. The washing time will be prolonged.

Downloaded From WashingMachine-Manual.com Manuals

4.6.8. Start the programme



START/PAUSE

Press the Start/Pause button. The relevant light will stop flashing. The message corresponding to the phase that is running will appear in the display window. If you have selected a delayed start the washing machine will start its countdown.

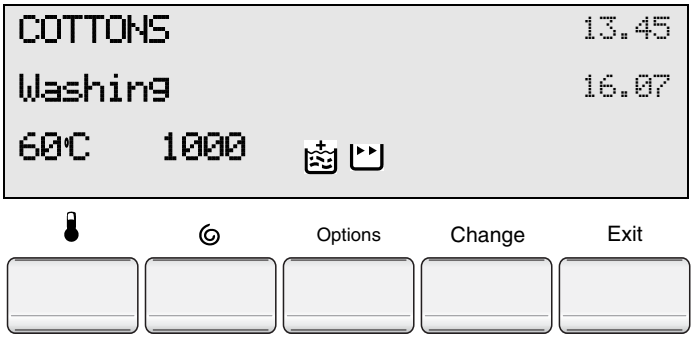

4.7. How to change a programme during its cycle ?

Before making any changes you must pause the washing machine by pressing the Start/Pause button. Any phase can be changed before the programme starts.
When the programme has started you can only reset the washing machine by turning the programme selector to Stop position "O" and then selecting a new programme. The washing water remains in the drum. To empty the water before starting a new washing cycle, you must cancel the programme and select the "Drain" cycle. Start the new programme by pressing the Start/Pause button.

4.8. Cancelling a programme

Turn the programme selector to the Stop position "O" to cancel the programme that is running. Now you can select a new programme.

4.9. How to open the lid during a washing cycle ?

During the first 10 minutes of a cycle you can open the lid (the messages "Immediate Opening" / "cycle phase" appear in the display window). You can pause the machine : the messages "Pause" / "Drum positioning" will appear in the display window.
If the following safety conditions have been observed:

- the washing machine is not in a heating phase greater than 55°C,
- the drum is not revolving.

It is possible to open the lid. After hearing the double click, the messages "Pause" / "Door openable" will appear in the display window. You can now open the lid.
If the safety conditions are not met, it is impossible to open the lid; the messages "Pause" / "Door locked" will appear in the display window. Press the Start/Pause button to start the current cycle again.

4.10. End of programme

At the end of the programme the washing machine will stop automatically, an audible signal will sound (if you have not selected the "No sound" option) and the messages "cycle ended" / "Door openable" will appear alternately.
If you have selected the "rinse hold" or "Silence cycle" options the Start/Pause button light is off. To drain or spin, turn the programme selector to the Drain, Spin or Delicate Spin programme. The "Door locked" message will appear in the display window.
An electronic system moves the drum to the high position when the cycle has finished. This system enables you to load and unload the washing more easily. The lid can be opened when the locking device sounds a double click (if the machine is unbalanced which alters the operation, turn the drum by hand).
Turn the programme selector to the "Stop" position to turn the washing machine off. Take the washing out. Remove the plug and turn off the water supply.
We recommend that you leave the lid and the drum open after use to air the interior.
Note: after a long period the time on your washing machine will have to be reset.

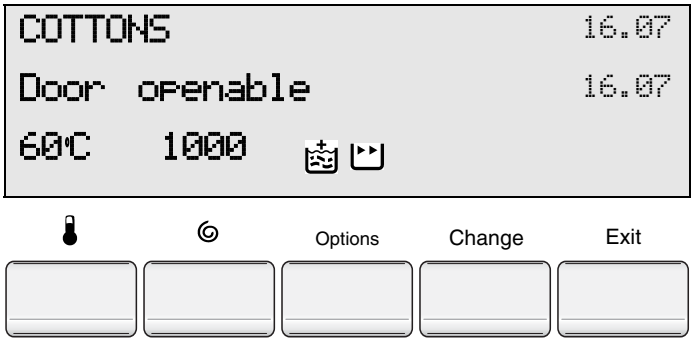

4.11. Memories

Frequently used programme settings can be saved. There are 3 memories available for this. The saved programme may be selected in the same way as any other washing programme by using the programme selector.

- Select the programme and washing cycle settings,
- Press the "Options" button until the "Setup" option appears.
- Press the "Change" button once to go into the "Setup" option.
- Select one of the memories using the "Options" button : the "Memory 1 : store program?" message will appear in the display window.
- To save the selected programme press the "Change" button. The "Stored" message will appear in the display window.
- Press the "Exit" button twice to return to programme selection.

Note: to change saved programme settings repeat the procedure from the beginning.

The programmes you have saved can be accessed from the programme selector under the heading "Memories".

Downloaded From WashingMachine-Manual.com Manuals

5. PROGRAMS TABLE

The following does not show all possibilities, but simply the most frequent settings.

Program Washing type	Load	Options possibles	Tempera-tures	Appoximate consumptions	
			°C	Litres	kWh
COTTON White or coloured, for example, working laundry normally soiled, bed linen, table linen, underwear, towels.	5,0 kg	Rinse + Short / Extra short Delay start Pre-wash Intensiv Easy iron	90	48	1,70
COTTON This program can give the same washing results as the cotton program, and is also suitable for synthetics.	5,0 kg	Rinse + Delay start Pre-wash Easy iron	60 (*)	42	0,85
SYNTHETICS Synthetic fabrics, underwear, color fabrics, non-iron shirts, blouses.	2,5 kg	Rinse + Short / Extra short Delay start Pre-wash Intensiv Easy iron Economy	60	39	0,85
DELICATES For all delicate materials, for example curtains.	2,5 kg	Rinse + Short / Extra short Delay start Pre-wash	40	38	0,55
HANDWASH Very delicate washing marked «wash by hand».	1,0 kg	Delay start	40	45	0,50
WOOL Machine washable wool marked «pure wool, washable in machine, non shrinking».	1,0 kg		40	38	0,35
SILK Machine-washable laundry at 30°C	1,0 kg	Rinse + Delay start	30	38	0,22
FLASH 30 min For only slightly dirty materials, except for wool.	2,5 kg	Delay start	30	40	0,15
	Using				
RINSES	Hand washed washing may be rinsed with this program.			29	0,15
DRAINING	To do a draining after a rinse hold (silence cycle).			-	0,01
SPINNING	To do a spinning after a rinse hold (silence cycle) at max 1300 rpm.			-	0,03
DELICATE SPINNING	To do a short spinning after a rinse hold (silence cycle) at max 700 rpm.			-	0,02

(*) Reference program for tests according to standard IEC 456 (60° Cotton prog.)

Downloaded From WashingMachine-Manual.com Manuals

6. WASHING GUIDE

6.1. Sorting and preparing your washing

- Sort the washing by type and care symbol (see chapter 6.4: International symbols for care of textiles): normal wash for strong washing that can resist energetic wash and spin; delicate wash for delicate washing that should be treated more carefully. For mixed loads composed of articles of different types of fibers, choose a program and temperature suitable for the most fragile fiber.
- Wash white washing and color washing separately. Otherwise, the white washing may be colored or look gray.
- New clothes very often have too much color. Preferably wash new clothes separately for the first time. Respect "wash separately" and "wash several times separately" care instructions.
- Empty pockets and spread out the washing.
- Take off all loose buttons, pins and hooks and eyes. Close zip fasteners, tie knots in laces and straps.
- Turn clothes made of several layers of textiles (sleeping bags, anoraks, etc.), colored hosiery and wool and textiles with add-on decorations, inside out.
- Wash small delicate items (socks, tights, bras, etc) in a washing net.
- Treat curtains with special care. Remove curtain hooks and put net curtains in a net bag or a sachet.

6.2. Washing load depending on the nature of the material

The quantity of washing that you put in your drum must not exceed the maximum capacity of your washing machine. This capacity may vary depending on the nature of your textiles. Reduce the quantity of washing if it is very dirty or if you have terry cloth type materials.

Not all textiles have the same volume and the same water retention capacity. This is why in general the drum should be filled:

- completely, but without excessive pressure for cotton and linen, and for mixed washe,
- half full for treated cottons and synthetic fibers,
- about one third full for very delicate articles such as net curtains and wool.

For a mixed wash, fill the drum as required for the most delicate material.

6.3. Detergents and additives

Only use detergents and additives suitable for use in a washing machine. Read the manufacturer's instructions and respect sections 2 and 4.2.

Powder detergents can be used without restriction; liquid detergents should be poured either in the proportioning bowl directly in the drum, or in the wash compartment provided that the washing machine is started immediately; detergents in tablets or doses must be put into the wash compartment of the detergents dispenser in your washing machine.
The quantity of detergent to be used depends on the amount of washing to be washed, the hardness of the water and how dirty the washing is.
If the water is soft, you can reduce the doses slightly. Increase the doses slightly if the water is hard (it is recommended to use a water softener) or if the washing is very dirty or stained.
You can ask the water distribution company in your region or any other competent authority to find out the degree of hardness of your water.

Downloaded From WashingMachine-Manual.com Manuals

6.4. International symbols for care of textiles

NORMAL WASH						
	Wash at 95°C	Wash at 60°C	Wash at 40°C	Wash at 30°C	Delicate wash by hand	Do not wash
DELICATE WASH						

JAVEL WATER	Bleaching with chlorine (Javel water) allowed (only cold and with a dilute solution)	Do not bleach with chlorine (Javel water)

IRONING	High temperature (max 200°C)	Average temperature (max 150°C)	Low temperature (max 100°C)	Do not iron

DRY CLEANING	Dry cleaning (all usual solvents)	Dry cleaning (all solvents except trichloroethylene)	Dry cleaning (only oil solvents and R113)	Do not dry clean

				 High temperature Moderate Temperature	
DRYING	Dry washing spread out	Dry washing hung up	Dry washing on hanger	Drying in drum allowed	Do not dry in drum

Downloaded From WashingMachine-Manual.com Manuals

7. CARE AND CLEANING

Do not do any cleaning operation until you have unplugged the washing machine.

7.1. Descaling the washing machine

Normally there is no need to descale the washing machine if the detergent was correctly proportioned.
If descaling is necessary, use a special non-corrosive product specially designed for washing machines that you can find in the shops. Respect the proportion and frequency of descaling shown on your packaging.

7.2. The surface

Clean the surface of your washing machine using lukewarm water and a mild detergent. Never use alcohol, solvents or similar products.

7.3. The detergents dispenser

From time to time, you must clean the detergents dispenser in order to eliminate the possible wastes of the detergents and then to avoid an operating problem.
The detergent dispenser is very easy to remove for a light cleaning.

Disassembly:

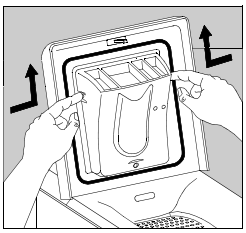

Press the clips on each side of the detergents dispenser and pull it upwards.

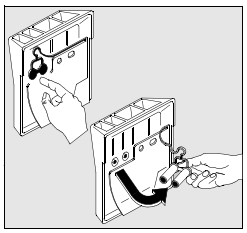

You can thus clean it using running water and a brush or a twisted cloth. Check that the siphons at the back of the detergents dispenser are not blocked.

Reassembly :

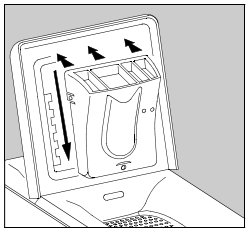

Put the detergents dispenser in the notches until they lock.

7.4. The drain filter

Clean the filter at the bottom of the washing machine regularly. The "filter"* light comes on if the filter is blo-cked. In this case clean it immediately. If you wash washing that is very fluffy, clean it after each wash.

- **Open the door, with a screwdriver for example:**

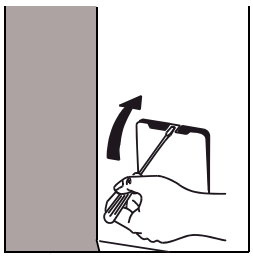

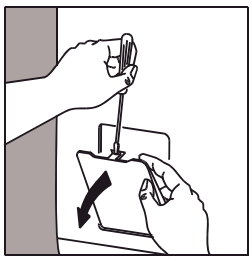

- **Drain residual water:**

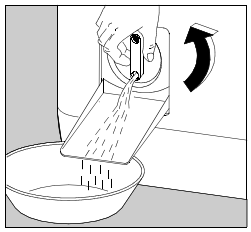

Put a receptacle under the drain. Turn the cap in the anti-clockwise direction until it is vertical to release residual water.

- **Remove the filter:**

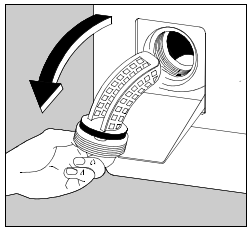

Unscrew the cap all the way and take it off. Clean it tho-roughly with running water. Put the assembly back and screw it in the clockwise direction.

After cleaning the filter, you are required to closed the door. In fact, for reasons of safety, the door must be closed when the appliance is working.

*depending on model

Downloaded From WashingMachine-Manual.com Manuals

8. OPERATING PROBLEMS

Many checks have been carried out during the manufacture of your washing machine. During machine operation it is possible that one of the following messages appears on the display :
Problem with the water supply ..... **«No incoming water. Check tap & hose»**
Problem with water draining..... **«No drain. Check drain hose / filter»**
Lid open..... **«Door not closed. Please check»**
Once the problem has been eliminated, press the START/PAUSE button to restart the programme. If after all checks, the problem persists, contact your local Service Centre.

Symptom	Cause
The washing machine will not start or will not fill:	• the washing machine is not correctly connected, the electrical installation is not working, • the cover of your washing machine and the drum flaps are not correctly closed **(Door not closed. Please check**) • you did not control the program start correctly, • there is a power failure, • the water supply is closed off **(No incoming water. Check tape & hose)** • the water tap is closed **(No incoming water. Check tap & hose)** • the water inlet is blocked **(No incoming water. Check tap & hose)**
The washing machine fills up but empties again immediately:	• the drain siphon is attached too low (see installation section).
The washing machine will not spin or will not empty:	• the drain pipe is blocked or kinked (**No drain. Check drain hose / filter)** • the drain filter is blocked (**Filter blocked / Pump blocked)** • the anti-unbalance mass safety device has tripped; bad distribution of washing in the drum, • The RINSE HOLD option, NIGHT CYCLE or NO SPIN has been selected. • the height of the drain siphon is wrong.
There is water on the floor around the washing machine:	• excess detergent has made too much foam that overflowed **(Excess detergent)**, • the detergent is not suitable for washing machine, • the drain siphon is not hooked on properly, • the drain filter was not put back into place, • the water inlet pipe is leaking.
Washing results are not satisfactory:	• the detergent is not suitable for machine washing, • there is too much washing in the drum, • the washing program is not appropriate, • there is not enough detergent.
The machine is vibrating or noisy:	• not all the packing was removed from the machine (see unpacking section), • the washing machine is not leveled and properly packed, • the washing machine is too close to the wall or furniture, • the washing is not well distributed in the drum, • the load is not sufficient.
The washing cycle is much too long :	• the water inlet is blocked **(No incoming water. Check tap & hose)** • there was a power supply failure or the water was cut off, • the motor temperature safety device tripped, • the water inlet temperature is lower than normal, • the foam detection safety system tripped (too much detergent) and the washing machine evacuated the foam, • the anti-unbalance mass safety device tripped, an additional phase was added to distribute the washing in the drum better.

Downloaded From WashingMachine-Manual.com Manuals

Symptom	Cause
The washing machine stops during a washing cycle :	• the water or electricity supply is defective, • a RINSE HOLD, NIGHT CYCLE or NO SPIN option was programmed.
The lid does not open during the cycle :	• the washing machine is in a heating phase beyond 55°C • the water level is too high • the drum is turning
The drum is not in high position at the end of the cycle :	• the drum could not reach the right position due to a persistent unbalanced mass; turn the drum manually.
The following message «**Door not closed. Please check**» appears in the display window :	• the lid is not correctly closed.
The following message «**No drain. Check drain hose / filter**» appears in the display window :	• the drain filter is blocked, • the drain pipe is blocked or kinked, • the drain pipe is too high (see «installation»), • the drain pump is blocked, • the installation siphon is blocked.
The following message «**No incoming water. Check tap & hose**» appears in the display window :	• the water tap is closed, • the water network has been cut off.
The following message «**Warning : EA6* / See instructions booklet**» appears in the display window :	• the flaps of the drum door are opened.
Softener or Javel water flows through the overflow orifice when filling.	• you did not put in the right amount, • the siphons at the back of the detergents dispenser are blocked.
The following message «**Excess detergent**» appears in the display window :	• you did not put in the right amount.
The following message «**Warning : E / See instructions booklet**» appears in the display window or the washing machine will not start or will be in Pause :	• turn the programme selector on the OFF position and call the After Sales Service.

*Depending on the model.

9. GUARANTEE

Depending to the Sales Company.

10. AFTER SALES SERVICE

If you have an operating problem, refer to the "Operating problems" section. If any work is necessary after you have made all your checks, your washing machine dealer is the first person authorized to take action. Otherwise, you can always call Consumers Help that will inform you of the address of an After Sales Service.

When you call the After Sales Service, mention the model and product number of your washing machine, and its serial number. This information is given on the inside of the filter door and on the data plate at the back of the washing machine.

If any work is done on your washing machine, insist that your After Sales Service uses manufacturer certified spare parts.

Downloaded From WashingMachine-Manual.com Manuals

B. FOR THE INSTALLER

1. WARNINGS

- This washing machine is heavy. Take care when moving it.
- You must remove the packing on the washing machine before use. Failure to remove all transport protection devices can cause damage to the washing machine or nearby furniture. The washing machine must be unplugged while packing is being removed.
- Do not allow any one other than a qualified plumber to make the hydraulic connections necessary to install your washing machine.
- The washing machine must be plugged in to a power outlet with a conform earth.
- Call a qualified electrician if the electrical installation in your residence is such that you have to modify it before you can connect your washing machine.
- Please read the instructions in the "electrical connections" chapter carefully before connecting your washing machine.
- After installing your washing machine, make sure that it is not standing on its electrical power supply cable.
- When your machine is installed on a carpeted floor, make sure that the carpet does not close off the ventilation openings near the bottom of the machine.
- The power supply cable may be only replaced by the After Sales Service.
- Your manufacturer cannot be held responsible for any damage resulting from a nonconform installation.

2. TECHNICAL CHARACTERISTICS

DIMENSIONS	Height Width Depth	850 mm 400 mm 600 mm
VOLTAGE / FREQUENCY TOTAL POWER		230 V / 50 Hz 2300 W
WATER PRESSURE Connection to the water network	Minimum Maximum	0,05 MPa (0,5 bar) 0,8 MPa (8 bars) Type 20x27
CE This washing machine complies with CEE directive 89-336 about the limitation of radioelectric disturbances and directive CEE 73-23 for electrical safety.		

Downloaded From WashingMachine-Manual.com Manuals

3. INSTALLATION

3.1. Unpacking

Packing used to protect internal parts of the washing machine during transport must be removed before the washing machine is put into service for the first time.

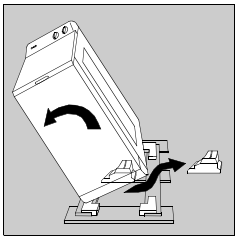

Remove all packing from the washing machine. Tilt the washing machine sideways and then remove the packing under the motor, and straighten the washing machine.

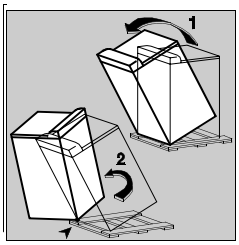

Tilt the washing machine backwards, rotate it by a quarter of a turn on one of its corner to remove the transport base.

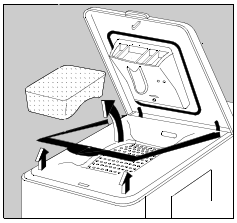

Open the washing machine lid and remove the immobilization packing and plastic films.
Close the lid.

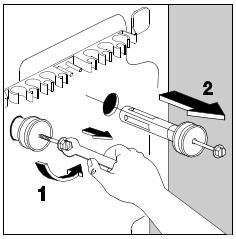

Use a 10 mm spanner to remove the two screws and spacers at the back.

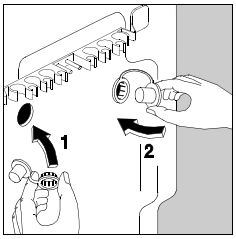

You can now see the openings that must be closed with the caches in the pack attached to the washing machine; do not forget to fold down the central capsule.

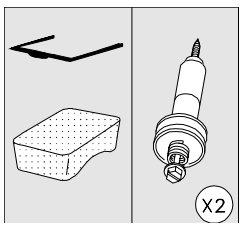

Make sure that you have removed all these parts from your washing machine and keep them so that you can use them again if you need them for future transport.

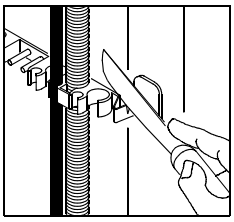

If you want to keep your washing machine aligned with the adjacent furniture, you can cut the pipe support strip at the back of your washing machine. Leave the two side closers in place.

3.2. Position

Put the washing machine on a flat hard floor in a well ventilated room.
Make sure that your washing machine does not touch the wall or any other furniture in the room.

3.3. Moving your washing machine

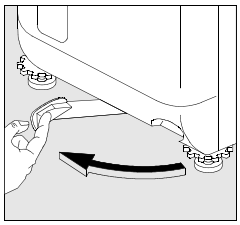

If you want to move your washing machine, lift it onto its rollers by pulling the lever at the bottom of the washing machine all the way to the left. When you have put your washing machine into the required location, put the lever back into its initial position.

3.4. Leveling

Precise leveling will prevent vibrations, noise and movements of the washing machine during operation.

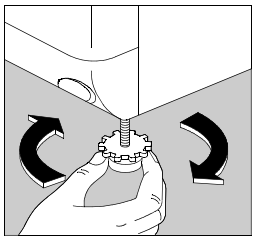

Make the washing machine level by adjusting the leveling screw that is too short.
Unscrew the stand and locking collar assembly (lift the washing machine if necessary).

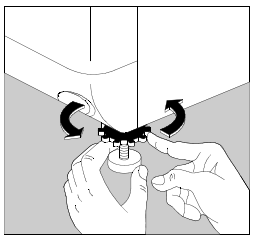

When the washing machine is stable, maintain the stand on the ground and turn the locking collar as far as posible.

3.5. Water inlet

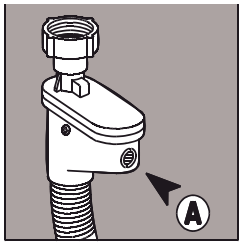

This device (the aqua-control hose) protects against water damage. The water inlet hose may perish due to natural wear : if this happens, this device stops water entering the appliance.

The fault is shown when a red mark appears in the window «A». Turn off the water inlet tap and call the After Sales Department.

Please install the water inlet hose onto the back of your washing machine :

Downloaded From WashingMachine-Manual.com Manuals

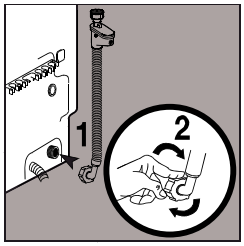

- Screw on the bottom fitting of the water inlet hose as shown in fig.1 and fig.2.

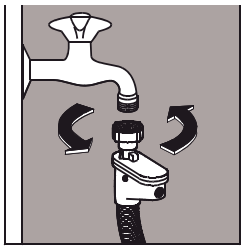

- Connect the feed hose connector onto the water inlet tap.

- Turn on the water inlet tap.

The water inlet hose cannot be extended. If it is too short, please contact the After Sales Department.

3.6. Drain

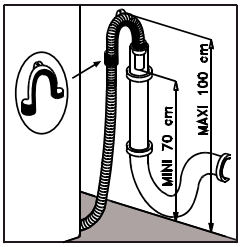

- Assemble the hose holder onto the drain hose.

- Place the assembly in a drainage pipe (or in a sink) at a height between 70 and 100 cm. Make sure that it will not fall out.

You must provide an air intake at the end of the drainage hose, to avoid any water being siphoned.
Important: the drainage hose must not be extended, on any account. If it is too short, contact a qualified engineer.

3.7. Electrical connection

You can only connect this washing machine to 230 V single phase power supply.

Check rating of the fuse line: 10 A at 230V.

The washing machine must not be connected through an extension cable or a power bar.

Check that the earthing connection is conform with the regulations in force.

Downloaded From WashingMachine-Manual.com Manuals

The Electrolux Group. *The world's No.1 Choice.*

The Electrolux Group is the world largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vaccum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

Downloaded From WashingMachine-Manual.com Manuals